

Mahindra
Rise.



QUICK REFERENCE GUIDE
6065/6075 - 2WD & 4WD
OPEN STATION



Version 1 - Nov'20 - English

Mahindra USA, Inc • 9020 Jackrabbit Road, Suite 600 • Houston, Texas 77095 • 1 877 449 7771

Quick Reference Guide

1. Service Intervals



Sl. No.	Area	Components	Part Number	Initial Service	Routine Service Interval (Whichever Comes First)		Operators Manual Reference
					Hours	Time	
1	Transmission/ Hydraulics	Strainer	007209731U11	-	Every 1300 Hrs	-	Page 87
2		Filter	007206723B1	100 Hrs	Every 500 Hrs	Annually	Page 86
3	Engine	Oil Filter	006016642V91	50 Hrs	Every 500 Hrs	Annually	Page 81
4		Fuel Filter	E006018618D1	-	Every 250 Hrs	Annually	Page 80
5		Primary Air Filter	006019167C1	-	Every 900 Hrs	-	Page 74
6		Secondary Air Filter	006019168C1	-	Every 900 Hrs	-	Page 74

Note: Location of filters/components shown approximately in above image
Subject to change without notice.

Quick Reference Guide

2. Capacities


Capacities	US Gallons	Quarts
Fuel tank	23.8	95.1
Cooling system	2.6	10.6
Engine oil	2.3	8.9
Transmission	14.5	58.1
Front axle (4WD)	1.5	5.9

3. Beeper Output

The beeper will beep at different rate during following conditions.

Priority	Description	Beeps/min
1	High Coolant Temperature	60
2	Engine Low Oil Pressure	40
3	Low Battery Charge	30
4	Low Fuel	15
5	Air Filter Clog	10

4. Fuse Ratings Chart

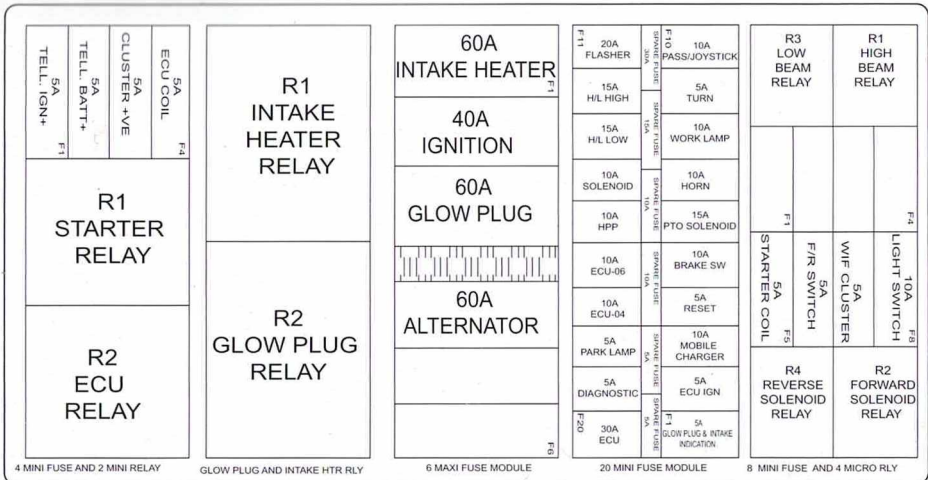

Subject to change without notice.






5. Fuse Box Locations












Fuse	Location	Operators Manual Reference
Main Fuse box	The fuse box is located inside the scuttle hood	Page 41

Quick Reference Guide

6. Lubrication And Greasing Chart

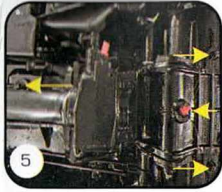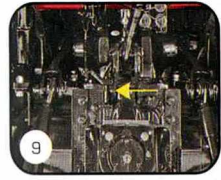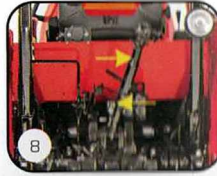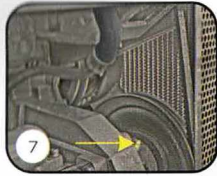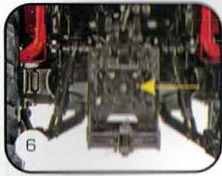

No.	Description
1	Engine Oil Filler Cap
2	Engine Oil Dipstick
3	Crankcase Drain Plug
4	Transmission Oil Filling
5	Transmission Oil Drain Plug
6	Transmission Oil Level Window
7	Roller Bearing Front Cover
8	Top Link
9	Bell Crank
10	Lift Rod LH/ RH
11	Front Axle Central Trunnion Support
12	Hub Reduction Steering Case LH/ RH
13	Front Axle Oil Drain Plug
14	Hub Housing Level Plug LH/ RH - 4WD
15	Hub Housing Fill Plug LH/ RH - 4WD

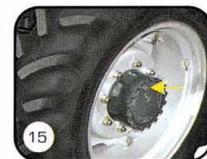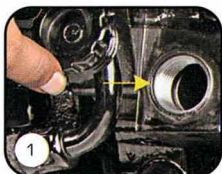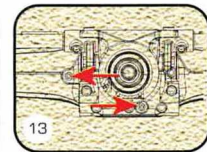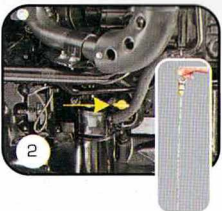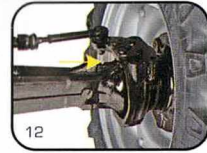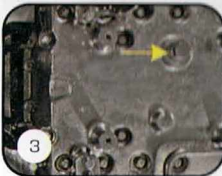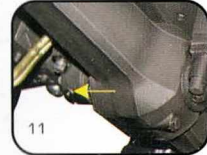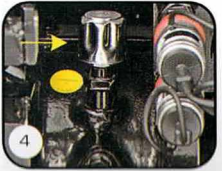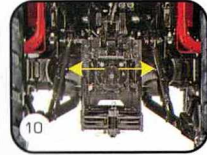

Subject to change without notice.